SCHEMATIC DIAGRAM

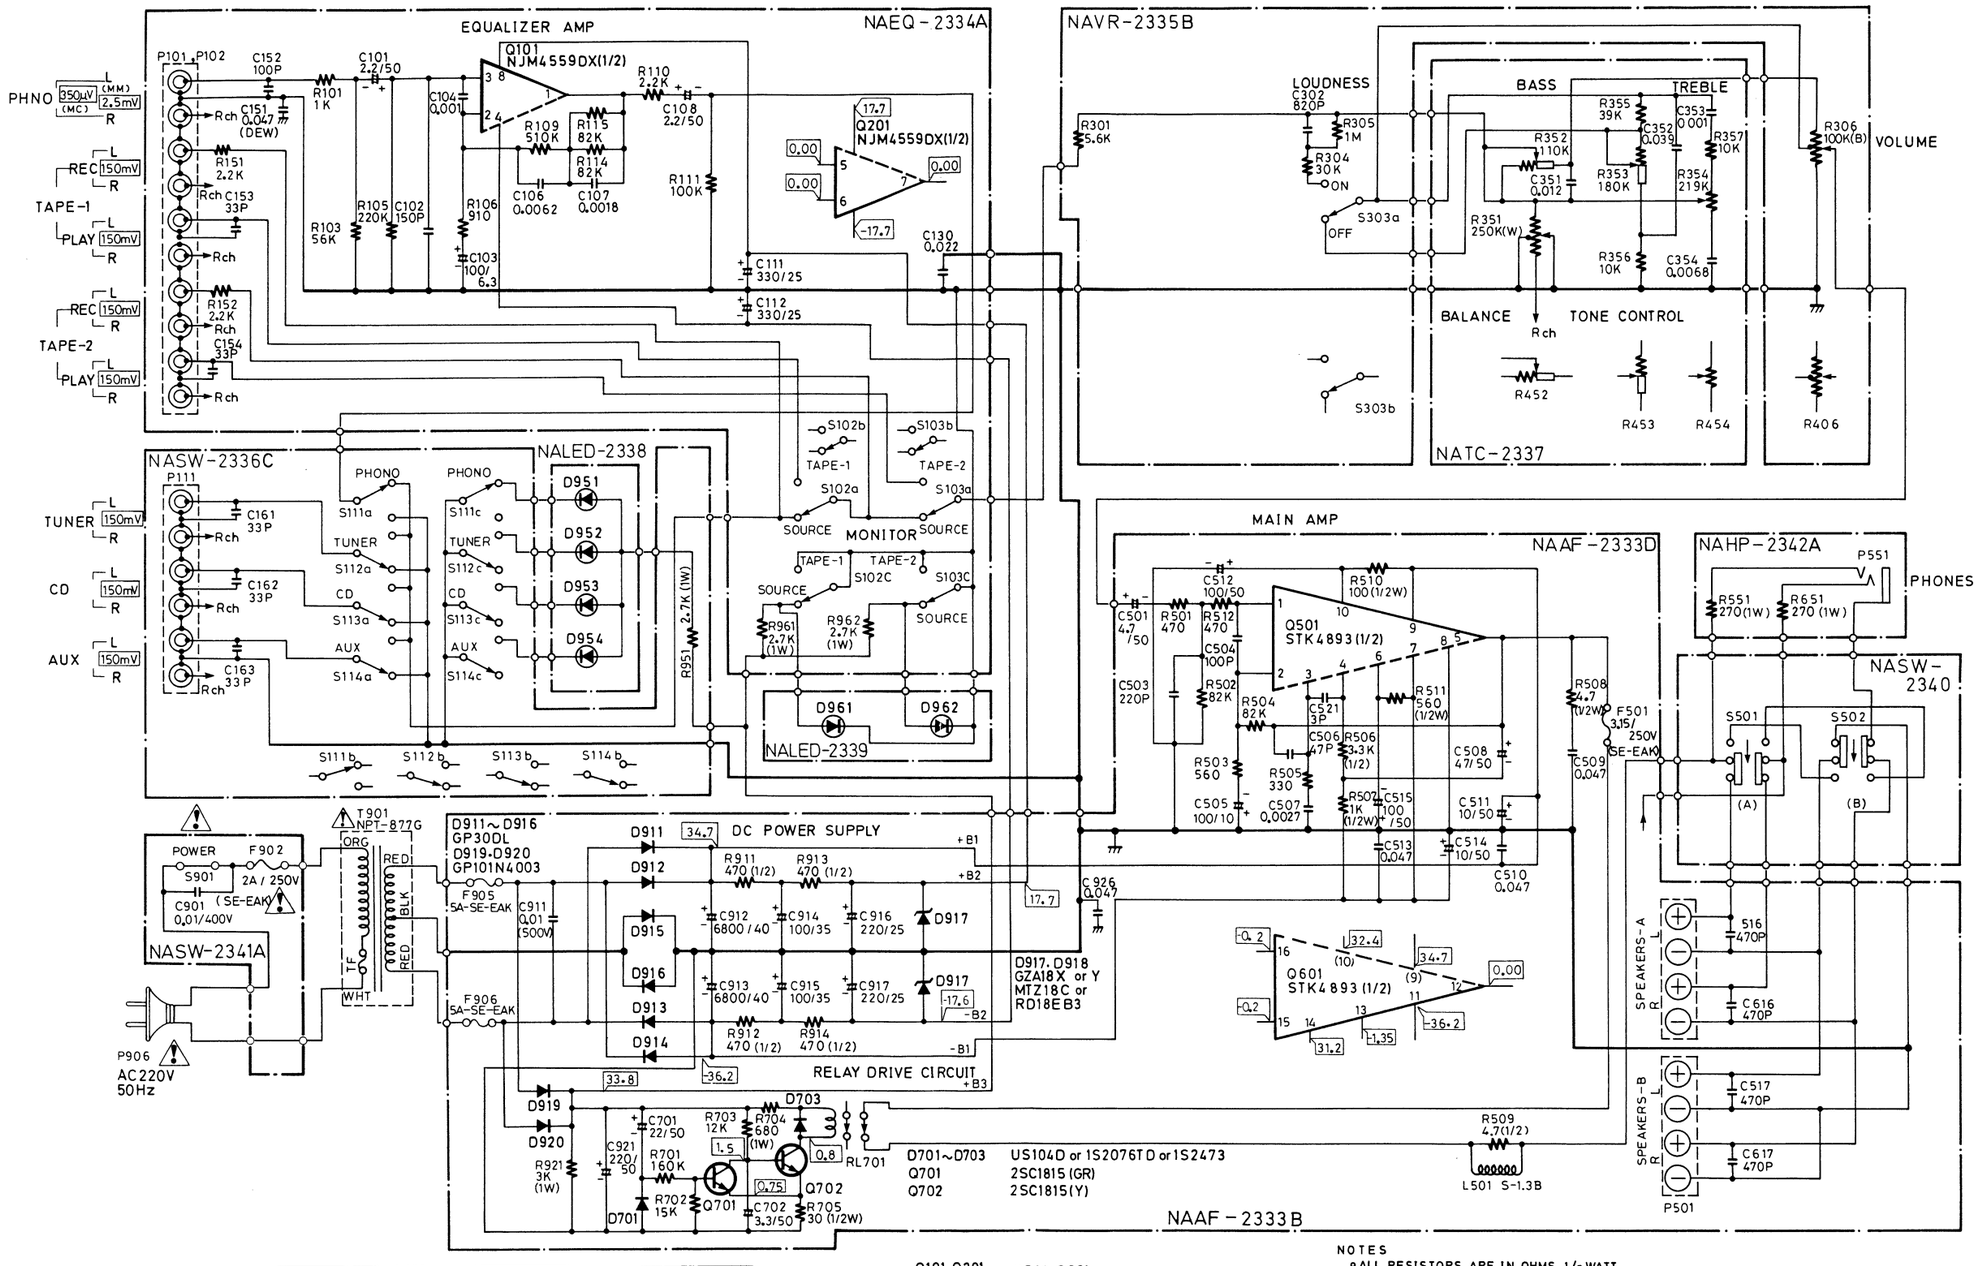

NO	FUNCTION	POSITION	NO	FUNCTION	POSITION
S901	POWER	OFF [ON]	S303	LOUDNESS	[OFF] ON
S102	MONITOR	[SOURCE] TAPE-1	S501	SPEAKERS A	OFF [A]
S103	MONITOR	[SOURCE] TAPE-2	S502	SPEAKERS B	[OFF] B
S111~S114	SELECTOR	[PH] TUN CD AUX			

Q701, Q702 (E C B)

Q101, Q201 (TOP VIEW)

Q501, Q601

NOTES
- ALL RESISTORS ARE IN OHMS 1/6 WATT UNLESS OTHERWISE NOTED.
- ALL CAPACITORS ARE IN μF 50WV UNLESS OTHERWISE NOTED.
- ELECTROLYTIC CAPACITOR (⊖⊕) ARE IN μF/WV.
- ALL DIODES ARE 1S1555 or DS442X or 1S2076 UNLESS OTHERWISE NOTED.
- VOLTAGE (MEASURED WITH V.T.V.M.) □V IS DC VOLTAGE (STOP MODE).
- THE COMPONENTS INDENTIFIED BY MARK ⚠ ARE CRITICAL FOR SAFETY REPLASE ONLY WITH PART NUMBER SPACIFIED.

ONKYO CORPORATION